


# WELCOME.

 
You just bought a NIXON watch. How about that. Welcome to the NIXON side, a side that's about custom-built product, quality, and durability.

We're stoked you selected one of our watches. The fact that you bought a NIXON means you can probably tell time, but you may not be familiar with all the doodads and features of our watches. So if you're stuck, read through these instructions. Or get your friends to read them and then they can tell you what's up.



## THE SUPER UNIT OPERATIONS MANUAL

www.nixon.com

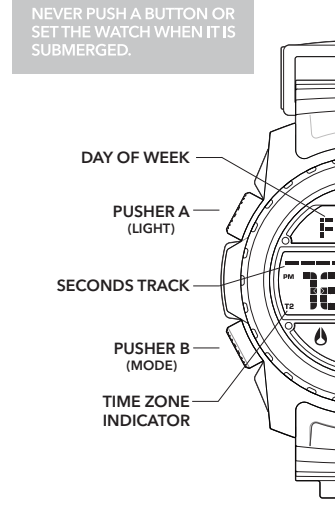

### WATER RESISTANCY RATINGS AND WATCH CARE

CASE RATING	RAIN, SPRAY, ETC.	SHALLOW SUBMERSION	SURFING, SNORKELING, DIVING
30 METER	✓	✓	✗
50 METER	✓	✓	✗
100-200 METER	✓	✓	✓

**DRY NO**

FEW OF OUR WATCHES ARE GEARED TOWARDS PURE STYLE AND ARE NOT DESIGNED FOR SURF OR DIVE. THIS IS INDICATED BY THE "NO WATER" ICON.

\*RINSE WATCH WITH SOAP AND WATER AFTER EXPOSURE TO SALT WATER OR SAND.

Replace the battery at least every two years. Dead or low batteries left in a watch may leak and destroy the movement of your watch. If you have a water resistant watch, the water resistance is attained using rubber or plastic seals which will deteriorate under normal conditions and reduce the water resistance of your watch. These seals should be checked by an authorized jeweler at least every two years to ensure the rated water resistance. Do not use a watch in water with a temperature above 60°C or 140°F, under -10°C or 14°F. No hot tubs or saunas. Sorry, but you do really need to know the time when you're not tubing? Avoid extreme shocks.

### CARACTÉRISTIQUES D'ÉTANCHÉITÉ À L'EAU ET ENTRETIEN DE LA MONTRE

CARACTÉRISTIQUES	PLUIE, ÉCLAUSSURES, ETC.	IMMERSION FAIBLE	SPORTS NAGE, SCUBA, DIVING
30 MÈTRES	✓	✓	✗
50 MÈTRES	✓	✓	✗
100-200 MÈTRES	✓	✓	✓

**DRY NO**

QUELQUES-UNES DE NOS MONTRES SONT ENRIEUXMENT DÉSIGNÉES POUR LE SURF OU LA NAGE. CEUX QUI NE SONT PAS EXPOSÉS À L'EAU SONT MARQUÉS AVEC L'ICÔNE "NO WATER".

\*RINCEZ LA MONTRE AU SAVON ET À L'EAU APRÈS TOUTE EXPOSITION À L'EAU SALEE OU AU SABLE.

Remplacez la pile au moins tous les deux ans. Des piles usées ou mal insérées dans une montre risquent de fuir et de détruire le mouvement de votre montre. Si vous possédez une montre étanche à l'eau, gardez à l'esprit que les matériaux qui assurent l'étanchéité de votre montre sont conçus pour résister à l'usure dans des conditions normales et diminuent la résistance de votre montre. Ces joints doivent être vérifiés par un réparateur agréé au moins tous les deux ans pour garantir l'étanchéité à l'eau spécifiée. N'exposez pas la montre à des températures extrêmes (supérieures à 60 °C ou 140 °F, inférieures à -10°C ou 14°F). Évitez les bains chauds ou les saunas. Désolé, mais vous avez vraiment besoin de savoir l'heure quand êtes dans un sauna ? Évitez les chocs extrêmes.

### GRADO DE RESISTENCIA AL AGUA Y MENTENIMIENTO DEL RELOJ

INDICE DE LA CASCASA	LUVIA, SALPICADURAS, ETC.	BAÑOS DE AGUA	DEPORTE EN AGUA, SCUBA, DIVING
30 METROS	✓	✓	✗
50 METROS	✓	✓	✗
100-200 METROS	✓	✓	✓

**DRY NO**

ALGUNOS DE NUESTROS RELOJES TIENEN UN DISEÑO ESPECIAL PARA EL SURF O LA NADACIÓN. LOS QUE NO TIENEN ESTAS CARACTERÍSTICAS SON MARCADOS CON EL ÍCONO "NO WATER".

\*LIMPIE EL RELOJ CON JABÓN Y AGUA DESPUÉS DE EXPONERLO AL AGUA SALADA O LA ARENA.

Cambie la pila al menos cada dos años. Las pilas agotadas o con poca vida que se dejen en el reloj pueden gotear y destruir el movimiento del reloj. Si tiene un reloj resistente al agua, sepa que la resistencia al agua se consigue utilizando materiales de goma o plástico que se deterioran bajo condiciones normales, reduciendo así la resistencia al agua de su reloj. Tales productos deberán ser comprobados por un taller certificado al menos una vez cada dos años para asegurar una correcta resistencia al agua. No exponga su reloj a temperaturas extremas (por encima de 60 °C o 140 °F, por debajo de -10 °C o 14 °F). No lleve su reloj en jacuzzis o saunas. Lo sentimos, pero ¿de verdad necesita saber la hora cuando está en un baño caliente? Evite los impactos.

### GRADO DI RESISTENZA ALL'ACQUA E CURA DELL'OROLOGIO

GRADO DELLA CASA	PIOGGIA, SCHIZZI, ECC.	BAGNI D'ACQUA	SPORTS NAVE, SCUBA, DIVING
30 METRI	✓	✓	✗
50 METRI	✓	✓	✗
100-200 METRI	✓	✓	✓

**DRY NO**

ALCUNI DEI NOSTRI OROLOGI SONO DOTATI DI DETTAGLI FURMATI PER IL SURF O LA NADAZIONE. QUELLE CONDIZIONE È INDICATA DALL'ICONA "NO WATER".

\*SCIACQUARE CON ACQUA E SAPONE DOPO L'ESPOSIZIONE ALL'ACQUA SALATA O ALLA SABBIA.

Scostare la batteria almeno una volta ogni due anni. Se le batterie scariche o quasi scariche vengono lasciate nell'orologio, possono perdere e rompere il movimento dell'orologio. Se l'orologio è resistente all'acqua, l'impermeabilità viene mantenuta mediante guarnizioni in gomma o plastica, che nelle normali condizioni, si deteriorano riducendo tale capacità nell'orologio. Tali guarnizioni devono essere controllate da un gioielliere autorizzato ogni due anni per garantire la resistenza all'acqua indicata. Non esporre l'orologio a temperature estreme (oltre 60 °C / 140 °F, sotto -10 °C / 14 °F). Non adatto a piscine con acqua calda o saune. Ci spiacce, ma alla fine è così importante sapere l'ora mentre ci si gode un bagno caldo? Evitare uri eccessivi.

### WASSERFESTIGKEITSNIVEAU UND PFLLEGHEINWEISE

GEHÄUSE EINTASTUNG	REGEN, SPRITZEN, ETC.	BEWÄSSERUNG	WASSERSPORT, SCUBA, DIVING
30 METER	✓	✓	✗
50 METER	✓	✓	✗
100-200 METER	✓	✓	✓

**DRY NO**

EIN PAAR UNSERER MODELLE SIND UM DIESE REISESTILE WILLEN BESONNEN UND NICHT ZUM SURFEN, SCHWIMMEN ODER DIVERN ENTWICKELT. DIESE DICHTUNGEN SOLLTEN ALLE ZWEI JAHRE VON EINEM UHRMACHER GEPRÜFT WERDEN. SETZE DEINE UHR KEINEM EXTREMEN TEMPERATURAN AUS (ÜBER 60 °C, ODER UNTER -10 °C). KEINE WHIRLPULVER O SAUNAS, ODER MUSSST DU WIRKLICH DIE ZEIT WISSEN, WENN DU BADEST? VERMEIDE EXTREME ERSCUTTERUNGEN.

### WARRANTY INFO

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.


### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

# WELCOME.

 
You just bought a NIXON watch. How about that. Welcome to the NIXON side, a side that's about custom-built product, quality, and durability.

We're stoked you selected one of our watches. The fact that you bought a NIXON means you can probably tell time, but you may not be familiar with all the doodads and features of our watches. So if you're stuck, read through these instructions. Or get your friends to read them and then they can tell you what's up.



## THE SUPER UNIT OPERATIONS MANUAL

www.nixon.com

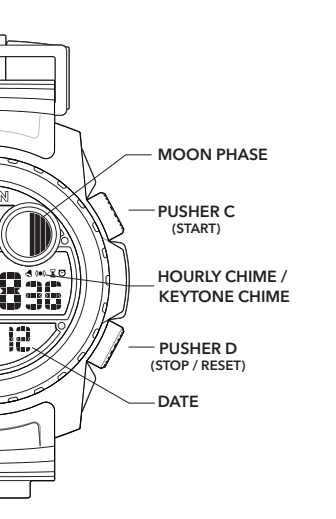

### WATER RESISTANCY RATINGS AND WATCH CARE

CASE RATING	RAIN, SPRAY, ETC.	SHALLOW SUBMERSION	SURFING, SNORKELING, DIVING
30 METER	✓	✓	✗
50 METER	✓	✓	✗
100-200 METER	✓	✓	✓

**DRY NO**

FEW OF OUR WATCHES ARE GEARED TOWARDS PURE STYLE AND ARE NOT DESIGNED FOR SURF OR DIVE. THIS IS INDICATED BY THE "NO WATER" ICON.

\*RINSE WATCH WITH SOAP AND WATER AFTER EXPOSURE TO SALT WATER OR SAND.

Replace the battery at least every two years. Dead or low batteries left in a watch may leak and destroy the movement of your watch. If you have a water resistant watch, the water resistance is attained using rubber or plastic seals which will deteriorate under normal conditions and reduce the water resistance of your watch. These seals should be checked by an authorized jeweler at least every two years to ensure the rated water resistance. Do not use a watch in water with a temperature above 60°C or 140°F, under -10°C or 14°F. No hot tubs or saunas. Sorry, but you do really need to know the time when you're not tubing? Avoid extreme shocks.

### CARACTÉRISTIQUES D'ÉTANCHÉITÉ À L'EAU ET ENTRETIEN DE LA MONTRE

CARACTÉRISTIQUES	PLUIE, ÉCLAUSSURES, ETC.	IMMERSION FAIBLE	SPORTS NAGE, SCUBA, DIVING
30 MÈTRES	✓	✓	✗
50 MÈTRES	✓	✓	✗
100-200 MÈTRES	✓	✓	✓

**DRY NO**

QUELQUES-UNES DE NOS MONTRES SONT ENRIEUXMENT DÉSIGNÉES POUR LE SURF OU LA NAGE. CEUX QUI NE SONT PAS EXPOSÉS À L'EAU SONT MARQUÉS AVEC L'ICÔNE "NO WATER".

\*RINCEZ LA MONTRE AU SAVON ET À L'EAU APRÈS TOUTE EXPOSITION À L'EAU SALEE OU AU SABLE.

Remplacez la pile au moins tous les deux ans. Des piles usées ou mal insérées dans une montre risquent de fuir et de détruire le mouvement de votre montre. Si vous possédez une montre étanche à l'eau, gardez à l'esprit que les matériaux qui assurent l'étanchéité de votre montre sont conçus pour résister à l'usure dans des conditions normales et diminuent la résistance de votre montre. Ces joints doivent être vérifiés par un réparateur agréé au moins tous les deux ans pour garantir l'étanchéité à l'eau spécifiée. N'exposez pas la montre à des températures extrêmes (supérieures à 60 °C ou 140 °F, inférieures à -10°C ou 14°F). Évitez les bains chauds ou les saunas. Désolé, mais vous avez vraiment besoin de savoir l'heure quand êtes dans un sauna ? Évitez les chocs extrêmes.

### GRADO DE RESISTENCIA AL AGUA Y MENTENIMIENTO DEL RELOJ

INDICE DE LA CASCASA	LUVIA, SALPICADURAS, ETC.	BAÑOS DE AGUA	DEPORTE EN AGUA, SCUBA, DIVING
30 METROS	✓	✓	✗
50 METROS	✓	✓	✗
100-200 METROS	✓	✓	✓

**DRY NO**

ALGUNOS DE NUESTROS RELOJES TIENEN UN DISEÑO ESPECIAL PARA EL SURF O LA NADACIÓN. LOS QUE NO TIENEN ESTAS CARACTERÍSTICAS SON MARCADOS CON EL ÍCONO "NO WATER".

\*LIMPIE EL RELOJ CON JABÓN Y AGUA DESPUÉS DE EXPONERLO AL AGUA SALADA O LA ARENA.

Cambie la pila al menos cada dos años. Las pilas agotadas o con poca vida que se dejen en el reloj pueden gotear y destruir el movimiento del reloj. Si tiene un reloj resistente al agua, sepa que la resistencia al agua se consigue utilizando materiales de goma o plástico que se deterioran bajo condiciones normales, reduciendo así la resistencia al agua de su reloj. Tales productos deberán ser comprobados por un taller certificado al menos una vez cada dos años para asegurar una correcta resistencia al agua. No exponga su reloj a temperaturas extremas (por encima de 60 °C o 140 °F, por debajo de -10 °C o 14 °F). No lleve su reloj en jacuzzis o saunas. Lo sentimos, pero ¿de verdad necesita saber la hora cuando está en un baño caliente? Evite los impactos.

### GRADO DI RESISTENZA ALL'ACQUA E CURA DELL'OROLOGIO

GRADO DELLA CASA	PIOGGIA, SCHIZZI, ECC.	BAGNI D'ACQUA	SPORTS NAVE, SCUBA, DIVING
30 METRI	✓	✓	✗
50 METRI	✓	✓	✗
100-200 METRI	✓	✓	✓

**DRY NO**

ALCUNI DEI NOSTRI OROLOGI SONO DOTATI DI DETTAGLI FURMATI PER IL SURF O LA NADAZIONE. QUELLE CONDIZIONE È INDICATA DALL'ICONA "NO WATER".

\*SCIACQUARE CON ACQUA E SAPONE DOPO L'ESPOSIZIONE ALL'ACQUA SALATA O ALLA SABBIA.

Scostare la batteria almeno una volta ogni due anni. Se le batterie scariche o quasi scariche vengono lasciate nell'orologio, possono perdere e rompere il movimento dell'orologio. Se l'orologio è resistente all'acqua, l'impermeabilità viene mantenuta mediante guarnizioni in gomma o plastica, che nelle normali condizioni, si deteriorano riducendo tale capacità nell'orologio. Tali guarnizioni devono essere controllate da un gioielliere autorizzato ogni due anni per garantire la resistenza all'acqua indicata. Non esporre l'orologio a temperature estreme (oltre 60 °C / 140 °F, sotto -10 °C / 14 °F). Non adatto a piscine con acqua calda o saune. Ci spiacce, ma alla fine è così importante sapere l'ora mentre ci si gode un bagno caldo? Evitare uri eccessivi.

### WASSERFESTIGKEITSNIVEAU UND PFLLEGHEINWEISE

GEHÄUSE EINTASTUNG	REGEN, SPRITZEN, ETC.	BEWÄSSERUNG	WASSERSPORT, SCUBA, DIVING
30 METER	✓	✓	✗
50 METER	✓	✓	✗
100-200 METER	✓	✓	✓

**DRY NO**

EIN PAAR UNSERER MODELLE SIND UM DIESE REISESTILE WILLEN BESONNEN UND NICHT ZUM SURFEN, SCHWIMMEN ODER DIVERN ENTWICKELT. DIESE DICHTUNGEN SOLLTEN ALLE ZWEI JAHRE VON EINEM UHRMACHER GEPRÜFT WERDEN. SETZE DEINE UHR KEINEM EXTREMEN TEMPERATURAN AUS (ÜBER 60 °C, ODER UNTER -10 °C). KEINE WHIRLPULVER O SAUNAS, ODER MUSSST DU WIRKLICH DIE ZEIT WISSEN, WENN DU BADEST? VERMEIDE EXTREME ERSCUTTERUNGEN.

### WARRANTY INFO

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.


### WARRANTY INFOINFORMATIONS SUR LA GARANTIE

Nixon offers a limited warranty of defects in materials and workmanship for a period of two (2) years after original purchase from an authorized Nixon dealer. This means that if you do not repair correctly, we will not repair or replace it, at our expense. Proof of purchase is required for all warranty claims and expect us to fix it for free. We don't cover normal wear and tear or batteries, crystals, watch case, strap, bracelet, or other parts that are not attached to the watch. We do cover caseback, push the buttons, undervator, or forget to screw down or push in the crown, and expect your watch to maintain its water resistance for the life of the watch. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt. We do not cover claims and service requests, so hold onto your receipt.

# WELCOME.

 
You just bought a NIXON watch. How about that. Welcome to the NIXON side, a side that's about custom-built product, quality, and durability.

We're stoked you selected one of our watches. The fact that you bought a NIXON means you can probably tell time, but you may not be familiar with all the doodads and features of our watches. So if you're stuck, read through these instructions. Or get your friends to read them and then they can tell you what's up.



## THE SUPER UNIT OPERATIONS MANUAL

www.nixon.com

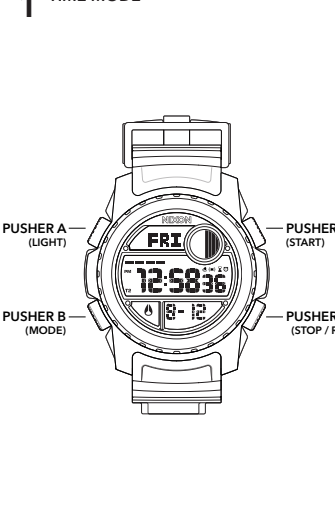

### WATER RESISTANCY RATINGS AND WATCH CARE

CASE RATING	RAIN, SPRAY, ETC.	SHALLOW SUBMERSION	SURFING, SNORKELING, DIVING
30 METER	✓	✓	✗
50 METER	✓	✓	✗
100-200 METER	✓	✓	✓

**DRY NO**

FEW OF OUR WATCHES ARE GEARED TOWARDS PURE STYLE AND ARE NOT DESIGNED FOR SURF OR DIVE. THIS IS INDICATED BY THE "NO WATER" ICON.

\*RINSE WATCH WITH SOAP AND WATER AFTER EXPOSURE TO SALT WATER OR SAND.

Replace the battery at least every two years. Dead or low batteries left in a watch may leak and destroy the movement of your watch. If you have a water resistant watch, the water resistance is attained using rubber or plastic seals which will deteriorate under normal conditions and reduce the water resistance of your watch. These seals should be checked by an authorized jeweler at least every two years to ensure the rated water resistance. Do not use a watch in water with a temperature above 60°C or 140°F, under -10°C or 14°F. No hot tubs or saunas. Sorry, but you do really need to know the time when you're not tubing? Avoid extreme shocks.

### CARACTÉRISTIQUES D'ÉTANCHÉITÉ À L'EAU ET ENTRETIEN DE LA MONTRE

CARACTÉRISTIQUES	PLUIE, ÉCLAUSSURES, ETC.	IMMERSION FAIBLE	SPORTS NAGE, SCUBA, DIVING
30 MÈTRES	✓	✓	✗
50 MÈTRES	✓	✓	✗
100-200 MÈTRES	✓	✓	✓

**DRY NO**

QUELQUES-UNES DE NOS MONTRES SONT ENRIEUXMENT DÉSIGNÉES POUR LE SURF OU LA NAGE. CEUX QUI NE SONT PAS EXPOSÉS À L'EAU SONT MARQUÉS AVEC L'ICÔNE "NO WATER".

\*RINCEZ LA MONTRE AU SAVON ET À L'EAU APRÈS TOUTE EXPOSITION À L'EAU SALEE OU AU SABLE.

Remplacez la pile au moins tous les deux ans. Des piles usées ou mal insérées dans une montre risquent de fuir et de détruire le mouvement de votre montre. Si vous possédez une montre étanche à l'eau, gardez à l'esprit que les matériaux qui assurent l'étanchéité de votre montre sont conçus pour résister à l'usure dans des conditions normales et diminuent la résistance de votre montre. Ces joints doivent être vérifiés par un réparateur agréé au moins tous les deux ans pour garantir l'étanchéité à l'eau spécifiée. N'exposez pas la montre à des températures extrêmes (supérieures à 60 °C ou 140 °F, inférieures à -10°C ou 14°F). Évitez les bains chauds ou les saunas. Désolé, mais vous avez vraiment besoin de savoir l'heure quand êtes dans un sauna ? Évitez les chocs extrêmes.

### GRADO DE RESISTENCIA AL AGUA Y MENTENIMIENTO DEL RELOJ

INDICE DE LA CASCASA	LUVIA, SALPICADURAS, ETC.	BAÑOS DE AGUA	DEPORTE EN AGUA, SCUBA, DIVING
30 METROS	✓	✓	✗
50 METROS	✓	✓	✗
100-200 METROS	✓	✓	✓

**DRY NO**

ALGUNOS DE NUESTROS RELOJES TIENEN UN DISEÑO ESPECIAL PARA EL SURF O LA NADACIÓN. LOS QUE NO TIENEN ESTAS CARACTERÍSTICAS SON MARCADOS CON EL ÍCONO "NO WATER".

\*LIMPIE EL RELOJ CON JABÓN Y AGUA DESPUÉS DE EXPONERLO AL AGUA SALADA O LA ARENA.

Cambie la pila al menos cada dos años. Las pilas agotadas o con poca vida que se dejen en el reloj pueden gotear y destruir el movimiento del reloj. Si tiene un reloj resistente al agua, sepa que la resistencia al agua se consigue utilizando materiales de goma o plástico que se deterioran bajo condiciones normales, reduciendo así la resistencia al agua de su reloj. Tales productos deberán ser comprobados por un taller certificado al menos una vez cada dos años para asegurar una correcta resistencia al agua. No exponga su reloj a temperaturas extremas (por encima de 60 °C o 140 °F, por debajo de -10 °C o 14 °F). No lleve su reloj en jacuzzis o saunas. Lo sentimos, pero ¿de verdad necesita saber la hora cuando está en un baño caliente? Evite los impactos.

### GRADO DI RESISTENZA ALL'ACQUA E CURA DELL'OROLOGIO

GRADO DELLA CASA	PIOGGIA, SCHIZZI, ECC.	BAGNI D'ACQUA	SPORTS NAVE, SCUBA, DIVING
30 METRI	✓	✓	✗
50 METRI	✓	✓	✗
100-200 METRI	✓	✓	✓

**DRY NO**

ALCUNI DEI NOSTRI OROLOGI SONO DOTATI DI DETTAGLI FURMATI PER IL SURF O LA NADAZIONE. QUELLE CONDIZIONE È INDICATA DALL'ICONA "NO WATER".

\*SCIACQUARE CON ACQUA E SAPONE DOPO L'ESPOSIZIONE ALL'ACQUA SALATA O ALLA SABBIA.

Scostare la batteria almeno una volta ogni due anni. Se le batterie scariche o quasi scariche vengono lasciate nell'orologio, possono perdere e rompere il movimento dell'orologio. Se l'orologio è resistente all'acqua, l'impermeabilità viene mantenuta mediante guarnizioni in gomma o plastica, che nelle normali condizioni, si deteriorano riducendo tale capacità nell'orologio. Tali guarnizioni devono essere controllate da un gioielliere autorizzato ogni due anni per garantire la resistenza all'acqua indicata. Non esporre l'orologio a temperature estreme (oltre 60 °C / 140 °F, sotto -10 °C / 14 °F). Non adatto a piscine con acqua calda o saune. Ci spiacce, ma alla fine è così importante sapere l'ora mentre ci si gode un bagno caldo? Evitare uri eccessivi.

### WASSERFESTIGKEITSNIVEAU UND PFLLEGHEINWEISE

GEHÄUSE EINTASTUNG	REGEN, SPRITZEN, ETC.	BEWÄSSERUNG	WASSERSPORT, SCUBA, DIVING
30 METER	✓	✓	✗
50 METER	✓	✓	✗
100-200 METER	✓	✓	✓

**DRY NO**

EIN PAAR UNSERER MODELLE SIND UM DIESE REISESTILE WILLEN BESONNEN UND NICHT ZUM SURFEN, SCHWIMMEN ODER DIVERN ENTWICKELT. DIESE DICHTUNGEN SOLLTEN ALLE ZWEI JAHRE VON EINEM UHRMACHER GEPRÜFT WERDEN. SETZE DEINE UHR KEINEM EXTREMEN TEMPERATURAN AUS (ÜBER 60 °C, ODER UNTER -10 °C). KEINE WHIRLPULVER O SAUNAS, ODER MUSSST DU WIRKLICH DIE ZEIT WISSEN



